



1. Open the AXR2E Configuration Utility.




2. Select the IP Address.

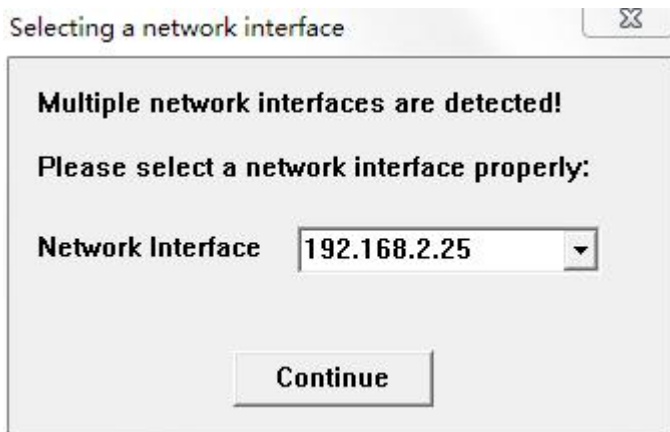

3. Select the TFTP Server option and open the file path. Then click the “Start” button.

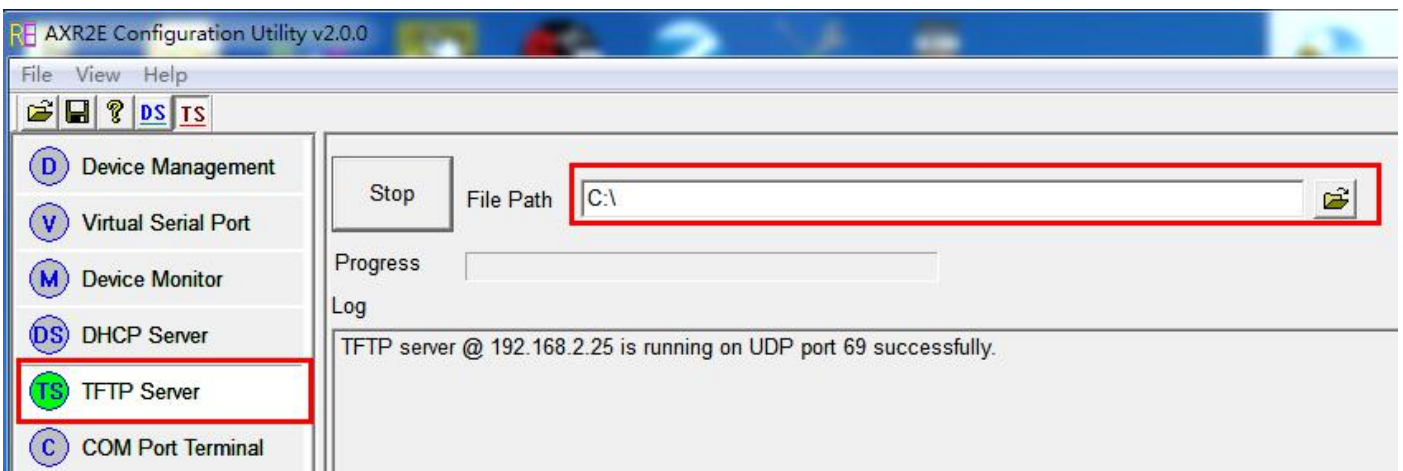


4. Select the “Device Management” option. Search - Select the unit - Firmware Upgrade

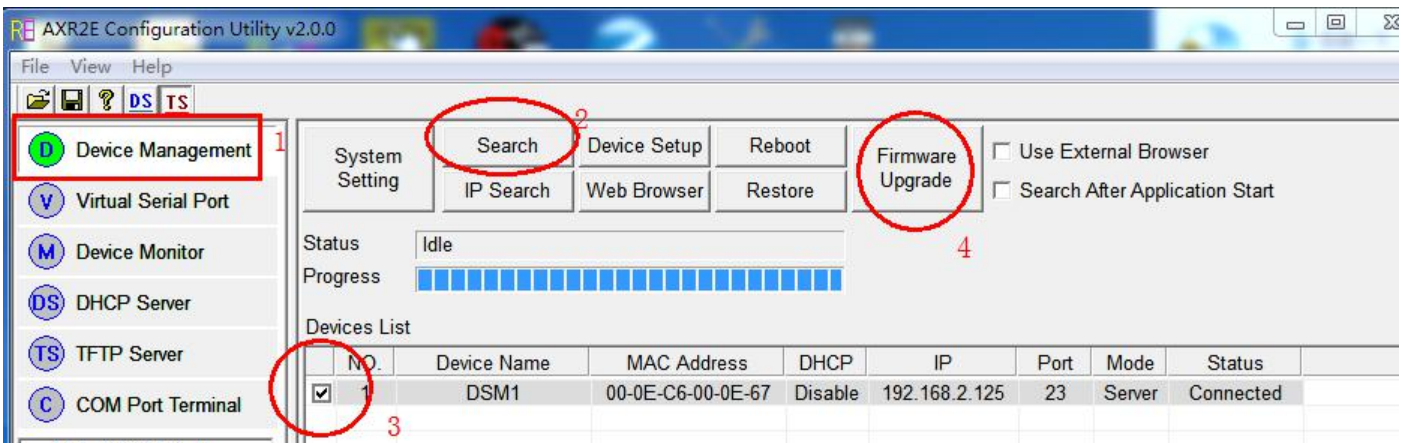


5. Then will Pop-up warning box. Click Yes.




6. Confirm the TFTP Server IP Address. Then click the Upgrade Firmware button.

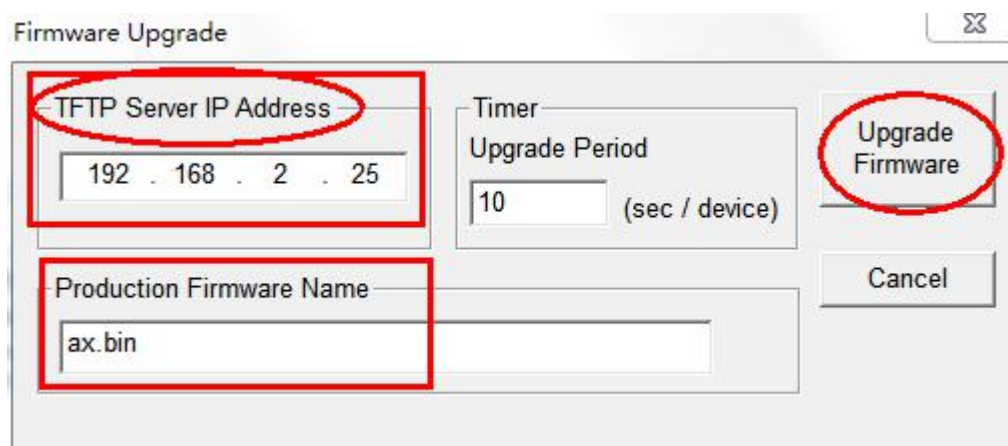


7. Check the upgrade progress.

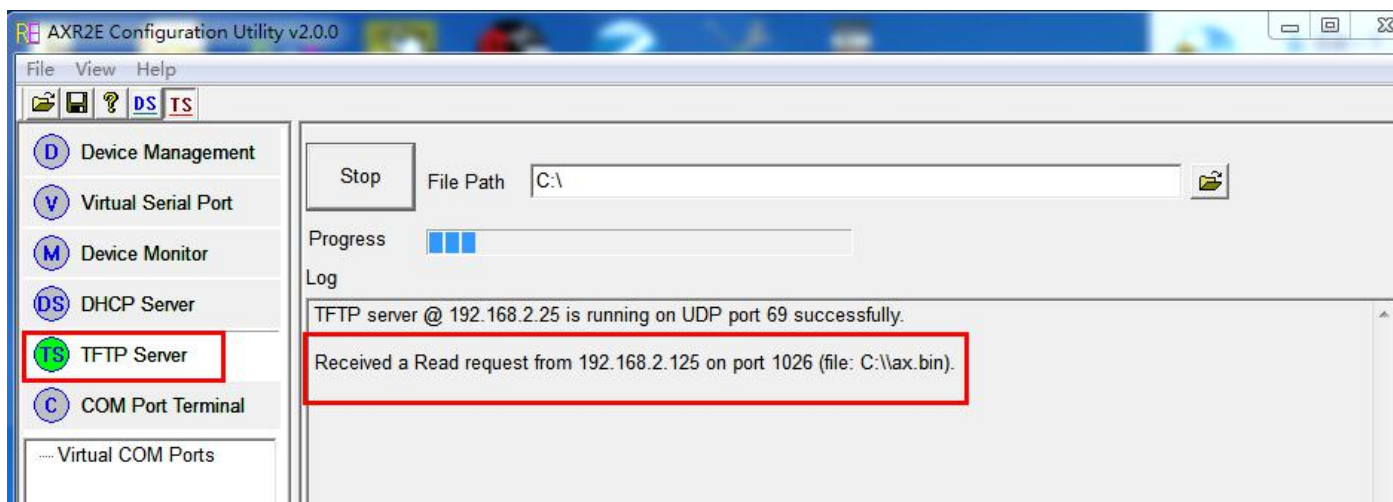

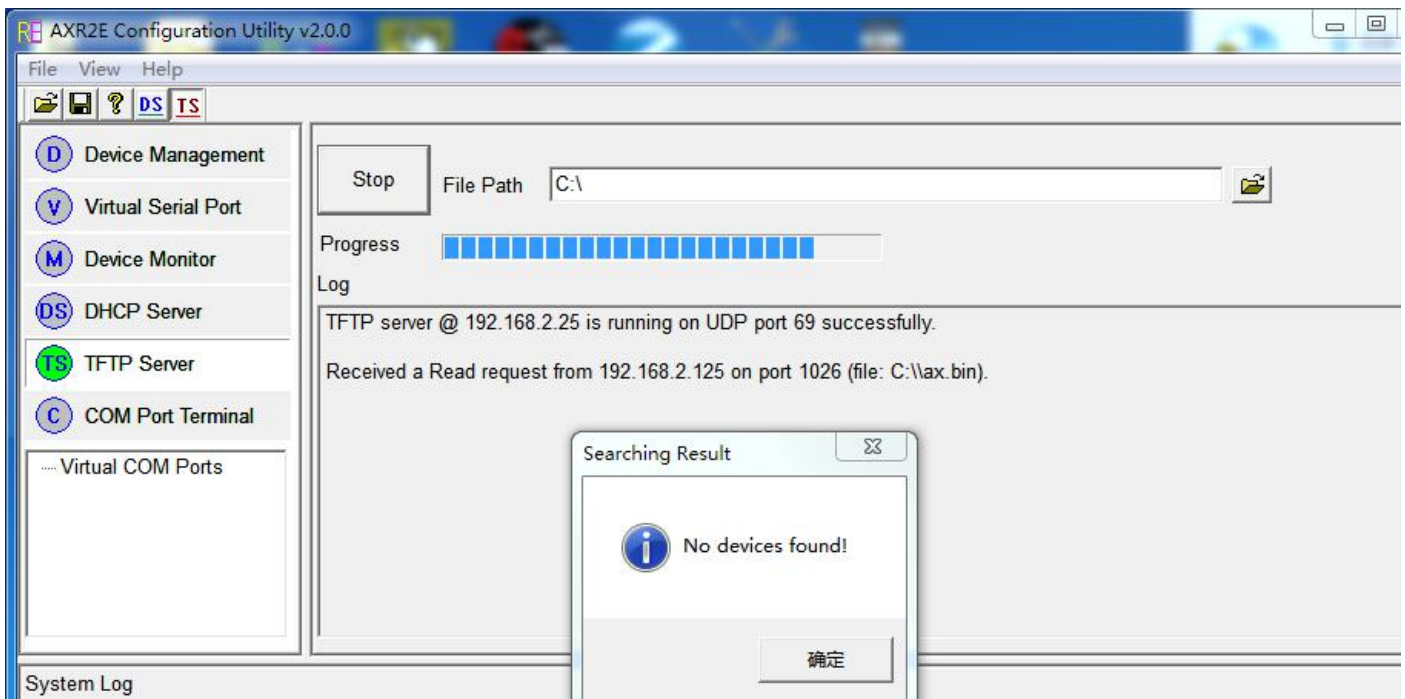



8. When appear “Read session is completed successfully” it means upgrade firmware OK.

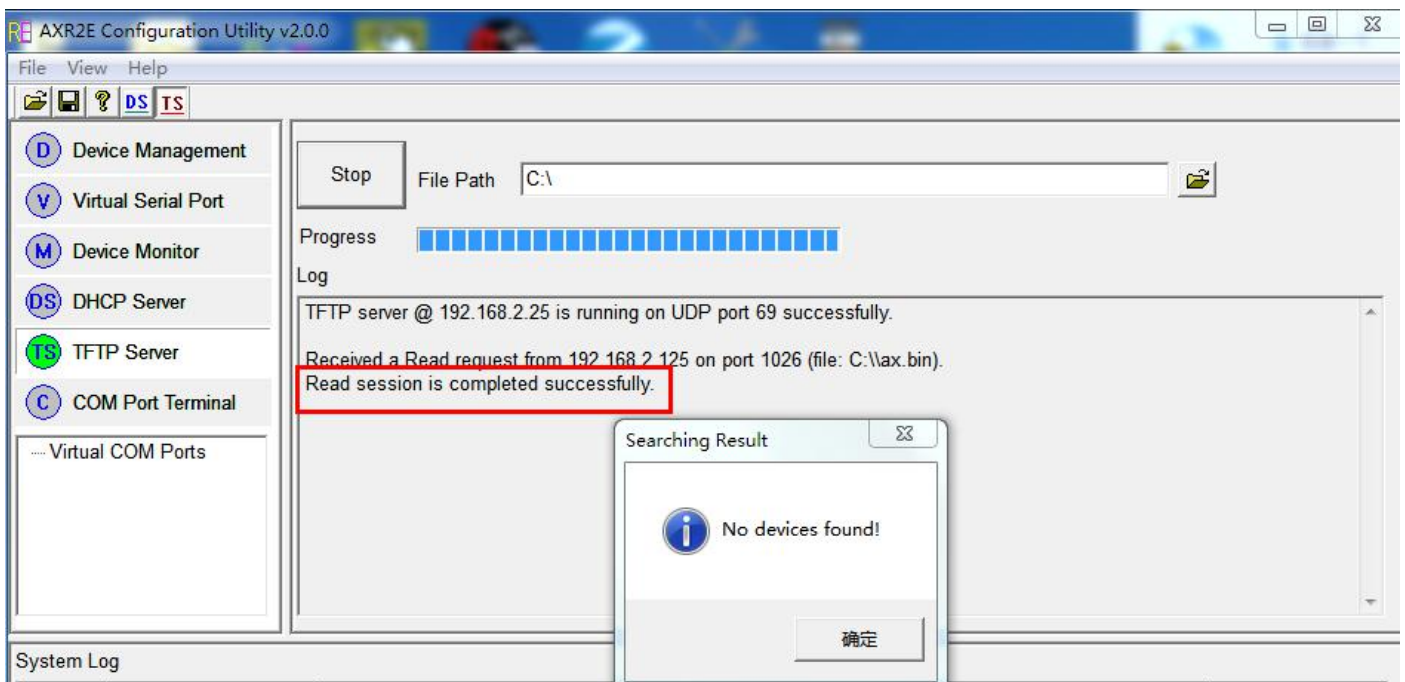

9. Open the Device Management option and check the search function.

10. Enter its web page. That means upgrade is no problem.

11. If need to upgrade other units. Please refer above steps.

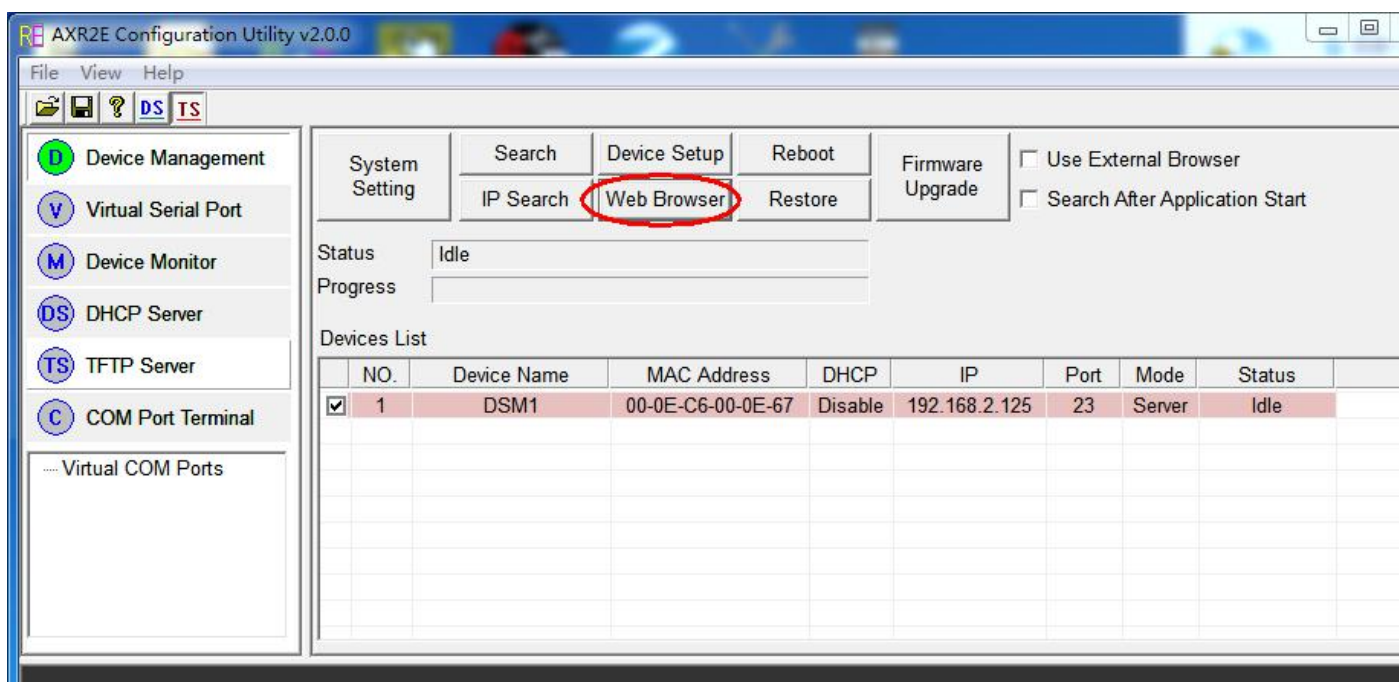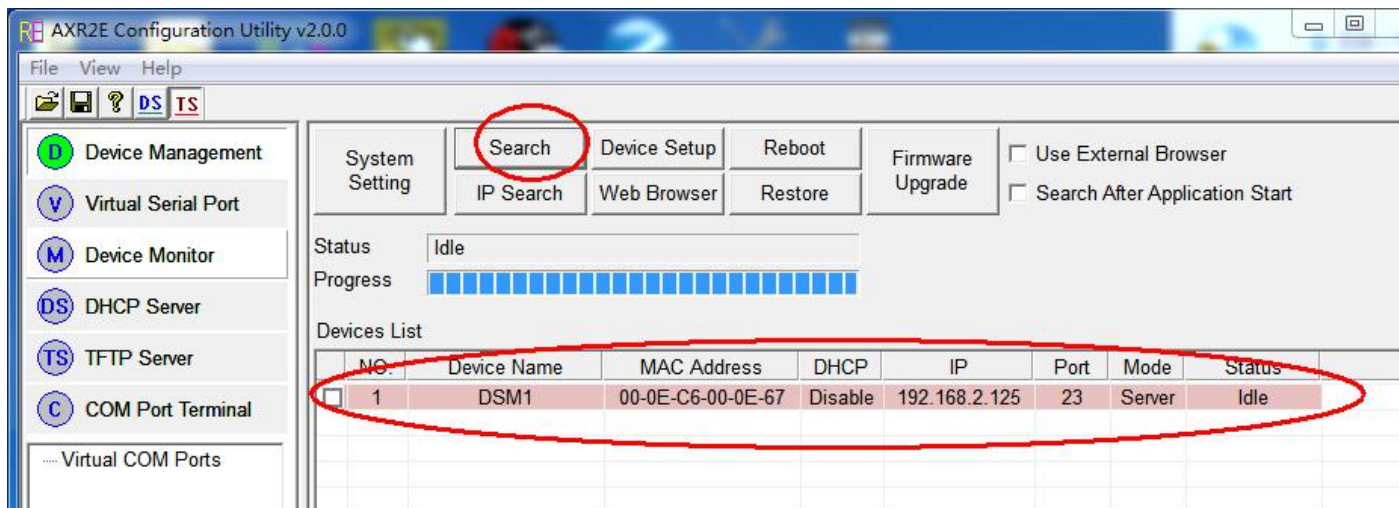

Shenzhen ATC Technology Co.,Ltd

Add. Room 803, Block D, Building 16, South Station Enterprise City,Port Road Nanhai District, Foshan, China,528251

Tel: (86 757) 8676 7929

Email: tech@szatc.com support@szatc.com

Website: www.szatc.com